


AMERICAN WOOD MOULDING L.L.C.

MDF

Chair Rail


Interior moulding applied about one-third up from the floor, paralleling the Base Moulding and encircling the room. Originally used to prevent chairs from marring walls.

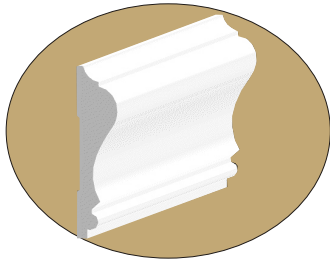


WM #	SAP#	Size	Length	Pcs./Bundle
390-MDF	300963	1 1/16 x 2-5/8	16'	6

Casing


Used to trim inside and outside door and window openings.

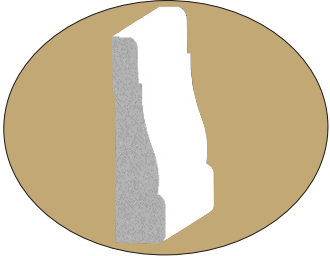

444-MDF	301076	5/8 x 3-1/8	16'	6
---------	--------	-------------	-----	---

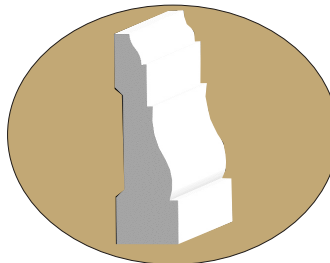

L366-MDF	302101	5/8 x 2-1/4	16'	6
361-MDF	300852	1 1/16 x 2-1/2	16'	6

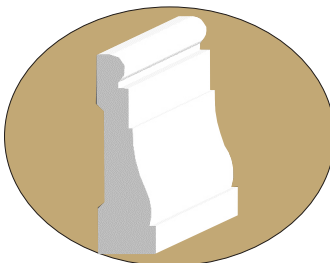


376-MDF	300909	1 1/16 x 2-1/4	16'	6
445-MDF	301094	5/8 x 3-1/4	16'	6

AMERICAN WOOD MOULDING L.L.C.


MDF

Base Mouldings


Applied where floor & walls meet, forming a visual foundation.
Protects walls from kicks, bumps, furniture etc.

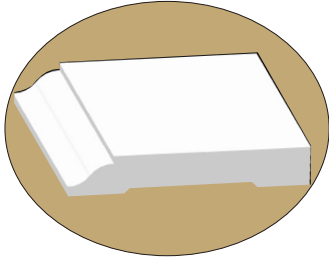

<u>WM #</u>	<u>SAP#</u>	<u>Size</u>	<u>Length</u>	<u>Pcs./Bundle</u>
623-MDF	301322	9/16 x 3-1/4	16'	5

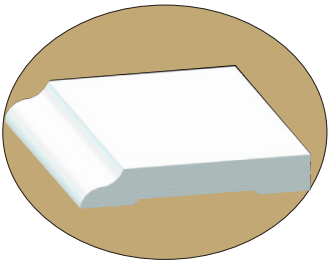

663-MDF	301417	9/16 x 3-1/4	16'	5
---------	--------	--------------	-----	---

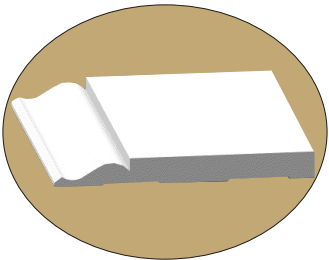

L163E-MDF	302031	9/16 x 5-1/4	16'	5
-----------	--------	--------------	-----	---